2008-2011 Ram Truck Dashboard Installation Guide



Original car center console diagram

Installation steps:

1. Pry open the silver trim on the Ma'an



2. Unscrew the mounting screws.



3. Pry open Ma'an



4. Pry open the cigarette lighter cover.



5. Unscrew the screws



6. Pry open the original vehicle's faceplate



7. Unscrew the original host screws



8. Rendering after demolition



9. Simply remove the original vehicle air vent and install it onto the aftermarket navigation frame.



10. Remove the original vehicle's air conditioning panel and install it on the aftermarket navigation system.




11. Remove the decorative trim pieces from both sides of the original vehicle panel and install them on the aftermarket navigation system.



12. When installing navigation on the original car's air conditioning panel, a small accessory needs to be attached.



A: Power cord, B: Air conditioner cord, C: Rearview camera cable, D: Panel button cable

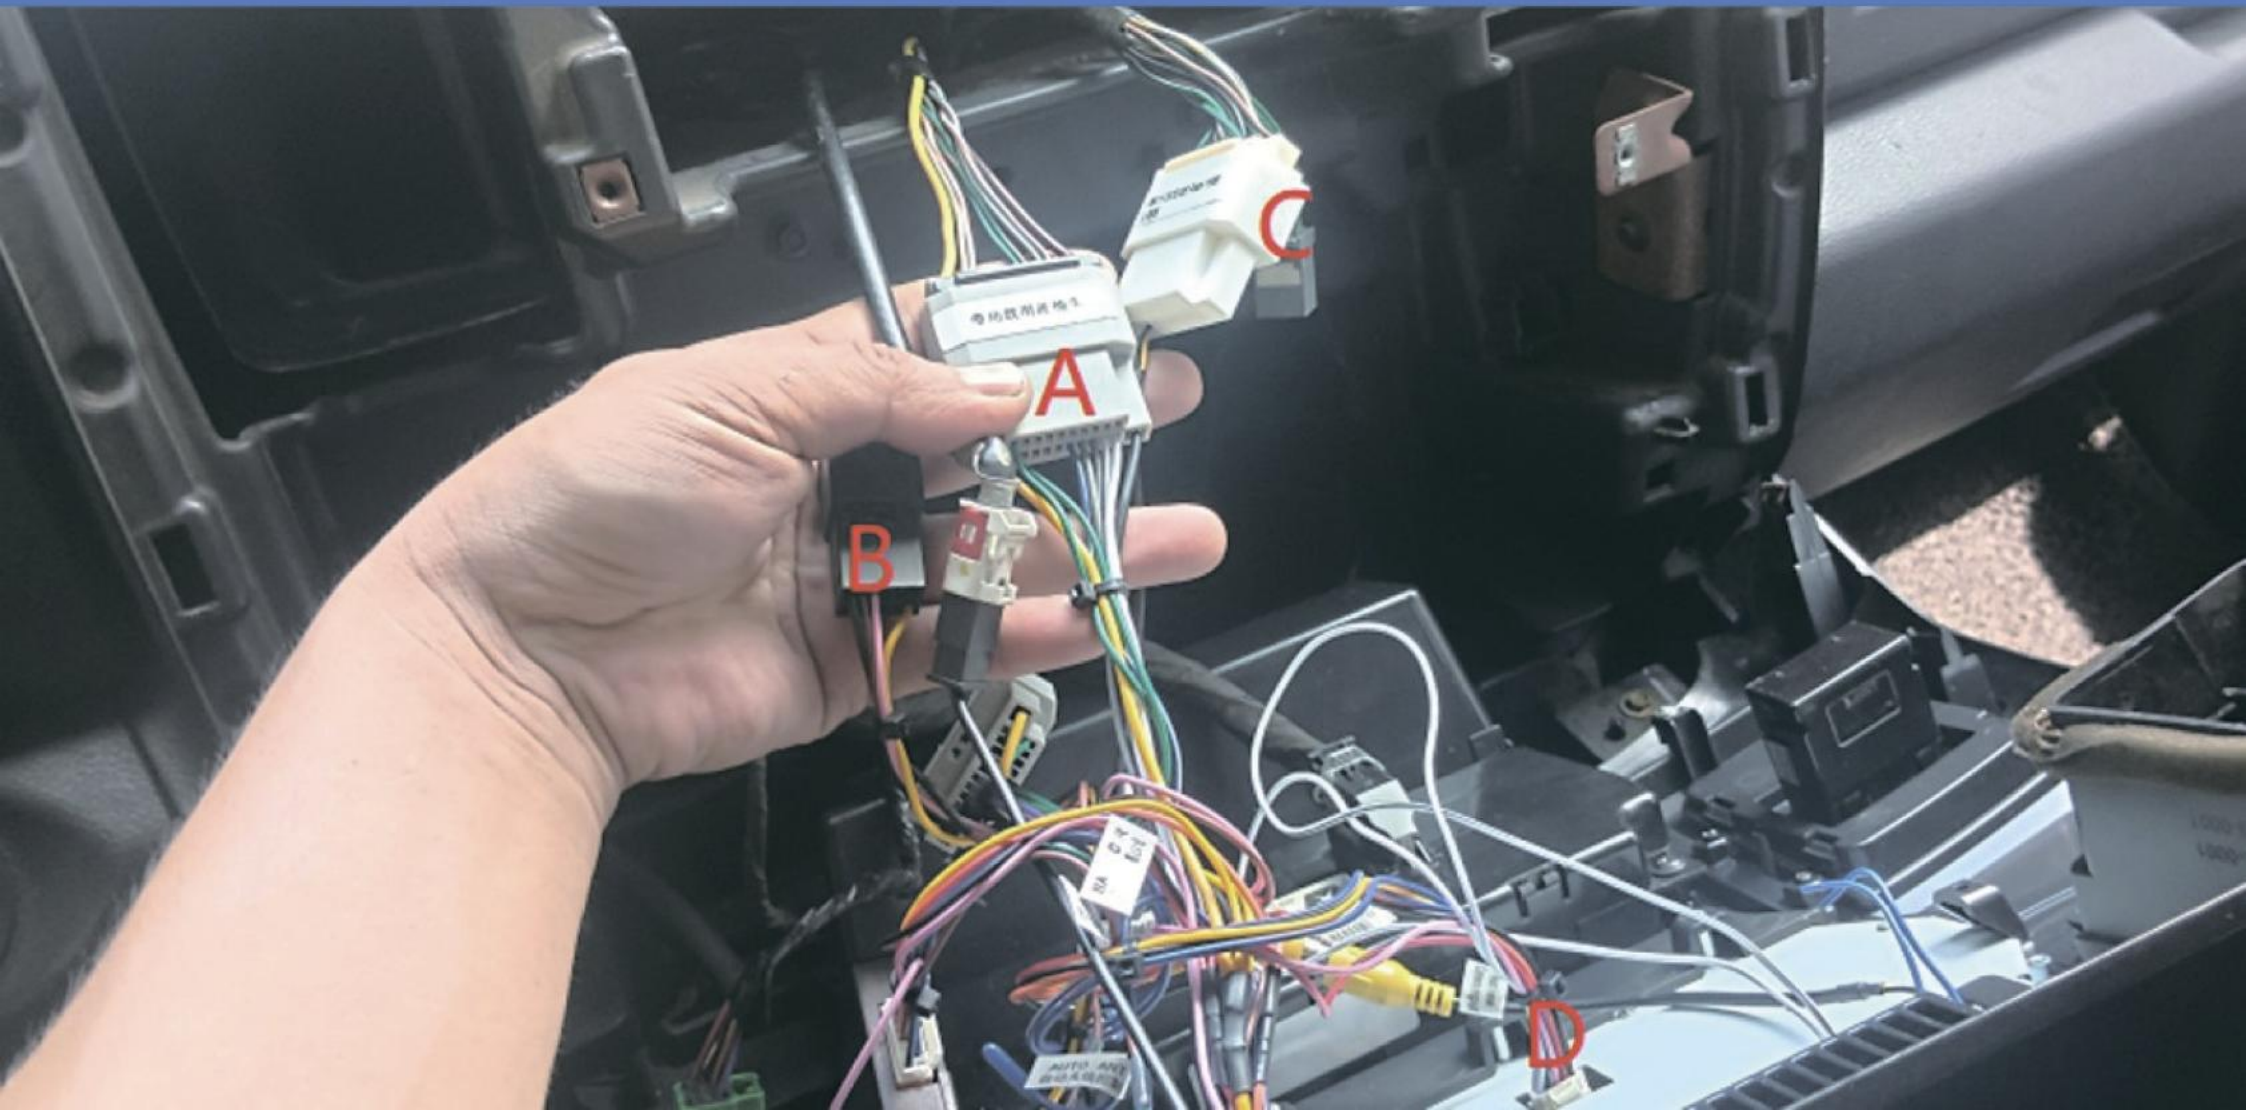

Renderings of the finished vehicle



Settings, Factory Settings, Password 8888, Vehicle Model Options, Roadway, Chrysler, 2009-2012 Ram Truck Base Model

