Porsche Macan (2014+) Android head unit CarPlay - 12.3"+12.3"

Installation Guide




Lift up the air outlet here




Lift up the air outlet here



Lift up the air outlet here

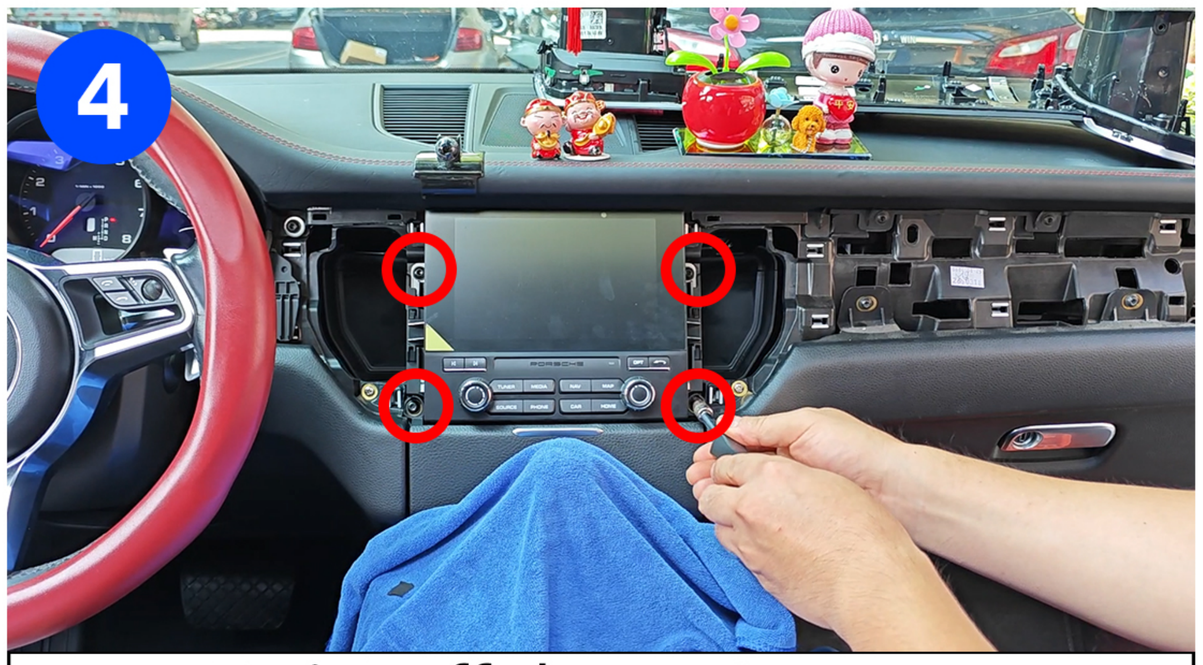

Twist off these 4 screws

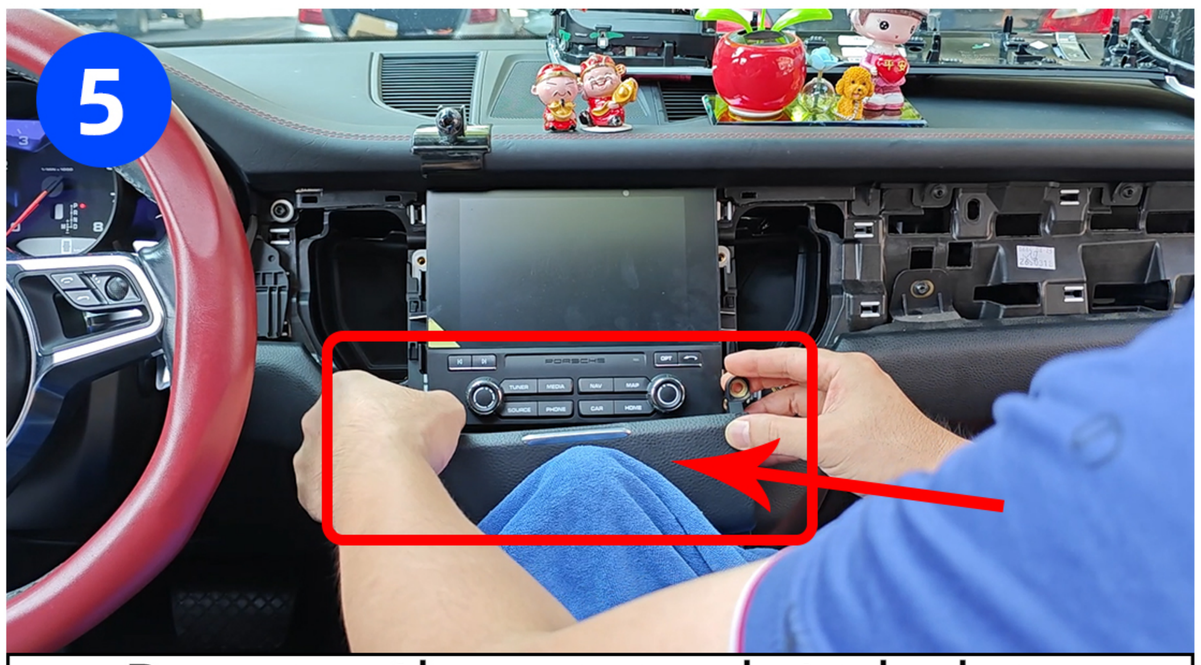


Remove the cover plate below



Twist off these two screws



Remove the screen host

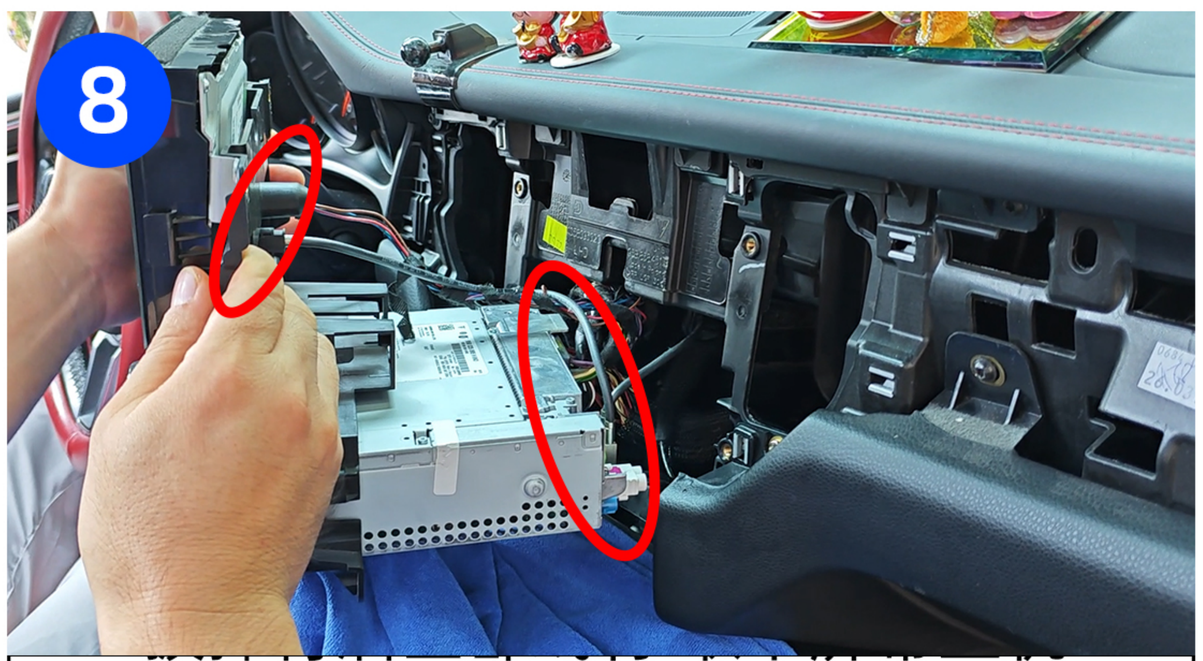

Unplug all cables from the back and remove the screen host



Lift up this decorative panel



Twist off these 4 screws



Remove this decorative panel



1. Remove this white plastic




2. Install our decorative panel




1. Remove this white plastic




2. Install our decorative panel

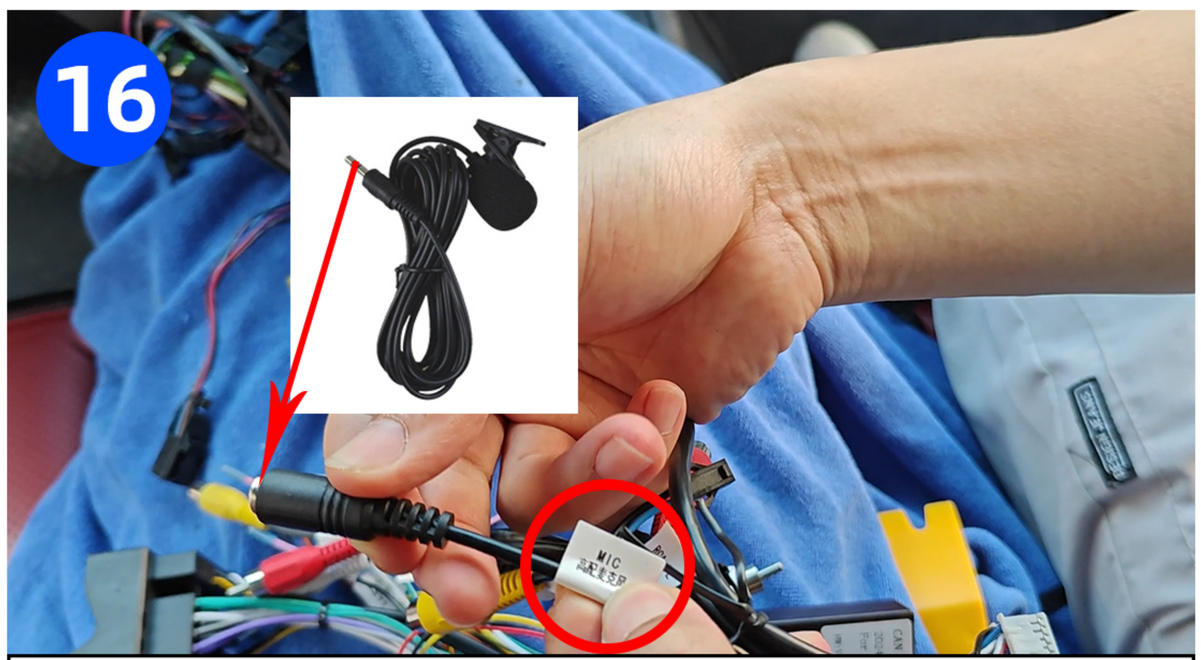


Connect the microphone cable

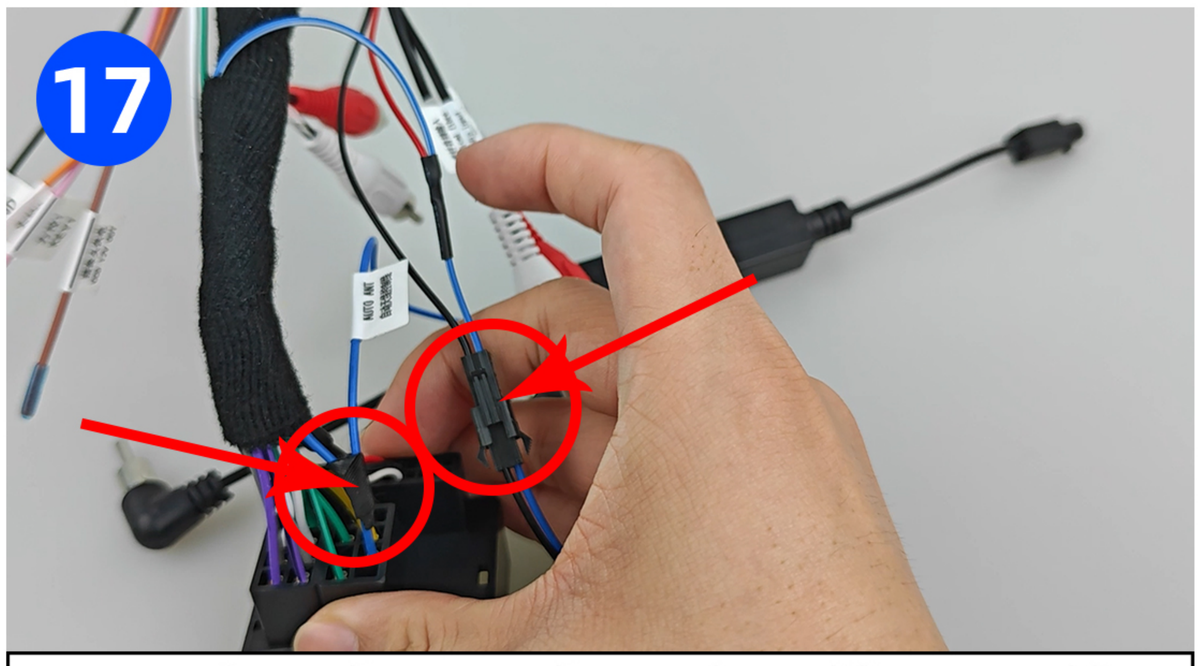


Connect the radio power line and amplifier control line

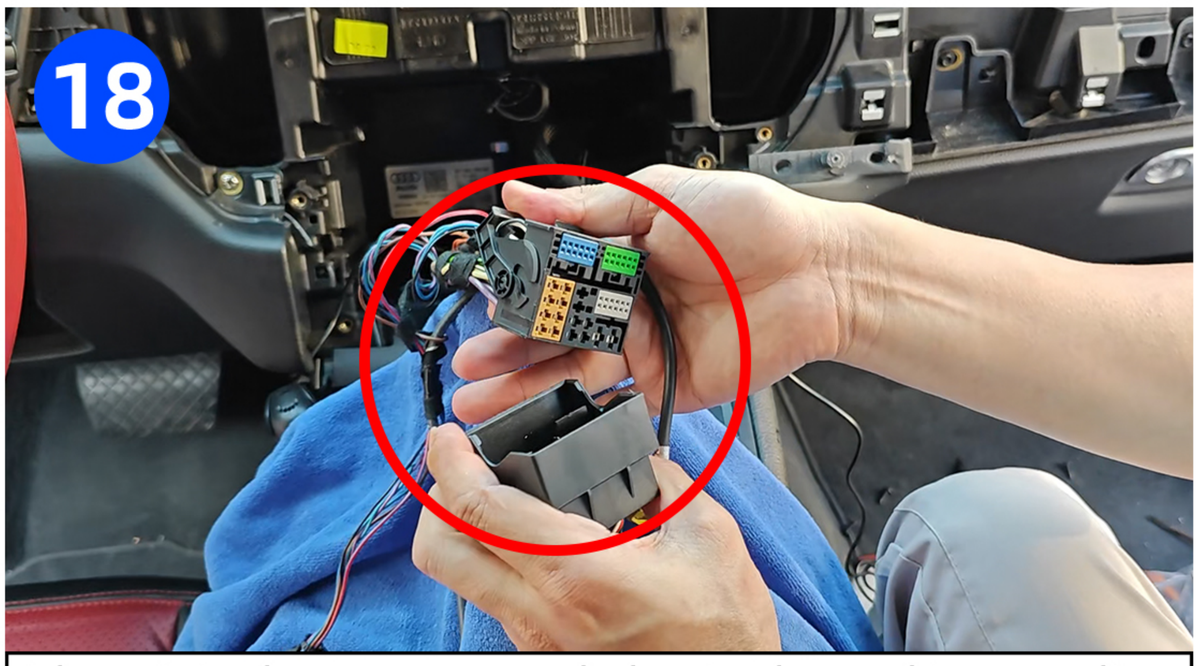


The original car power cord plug is plugged into our line

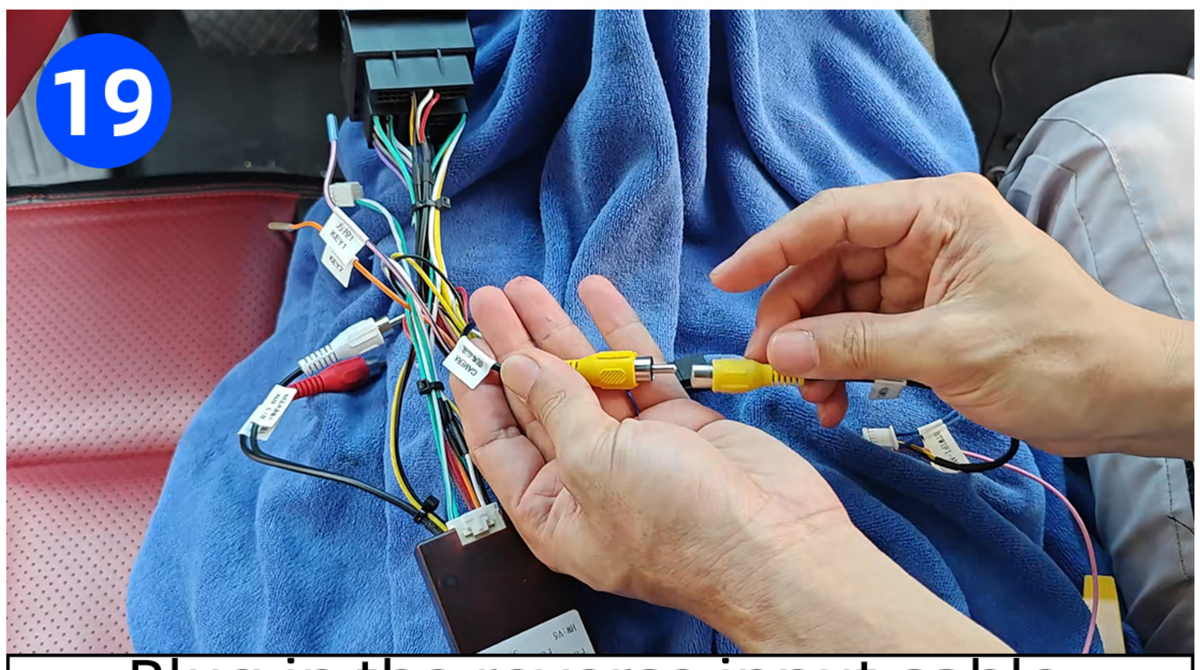


Plug in the reverse input cable

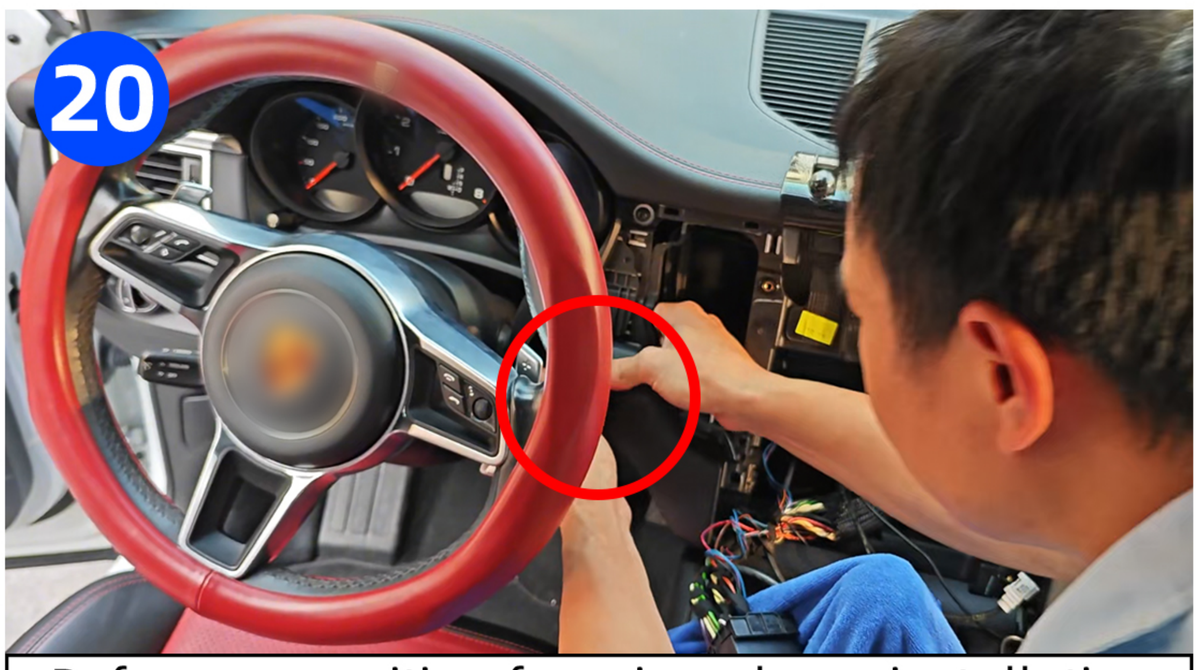

Reference position for microphone installation

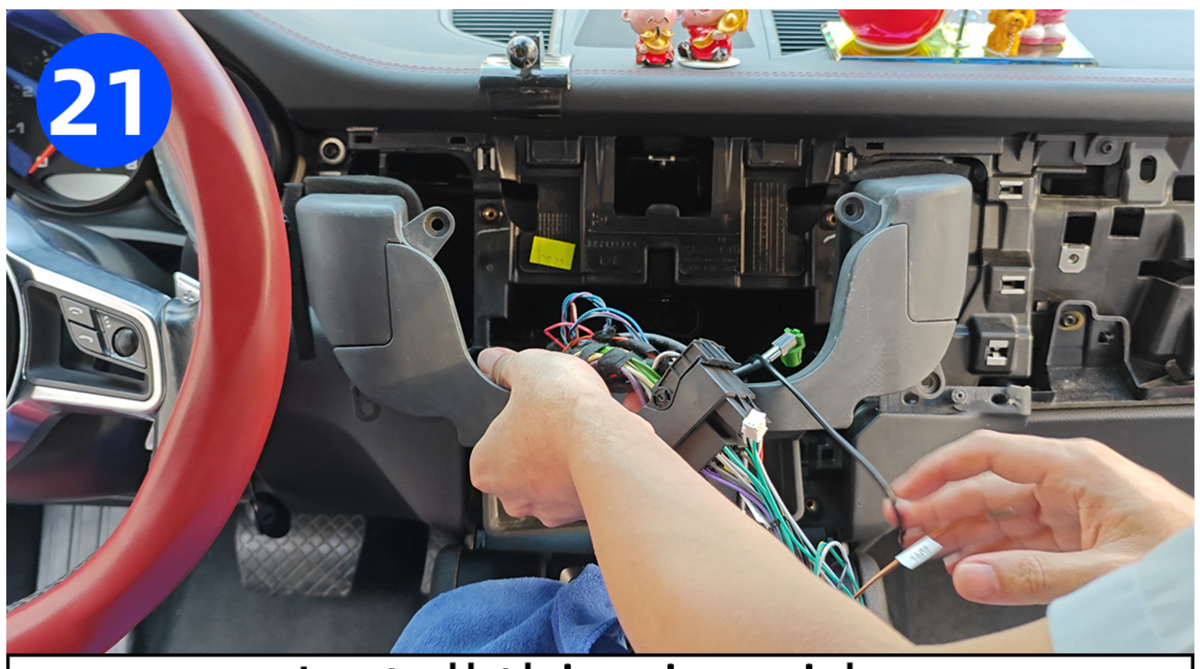


Install this air guide

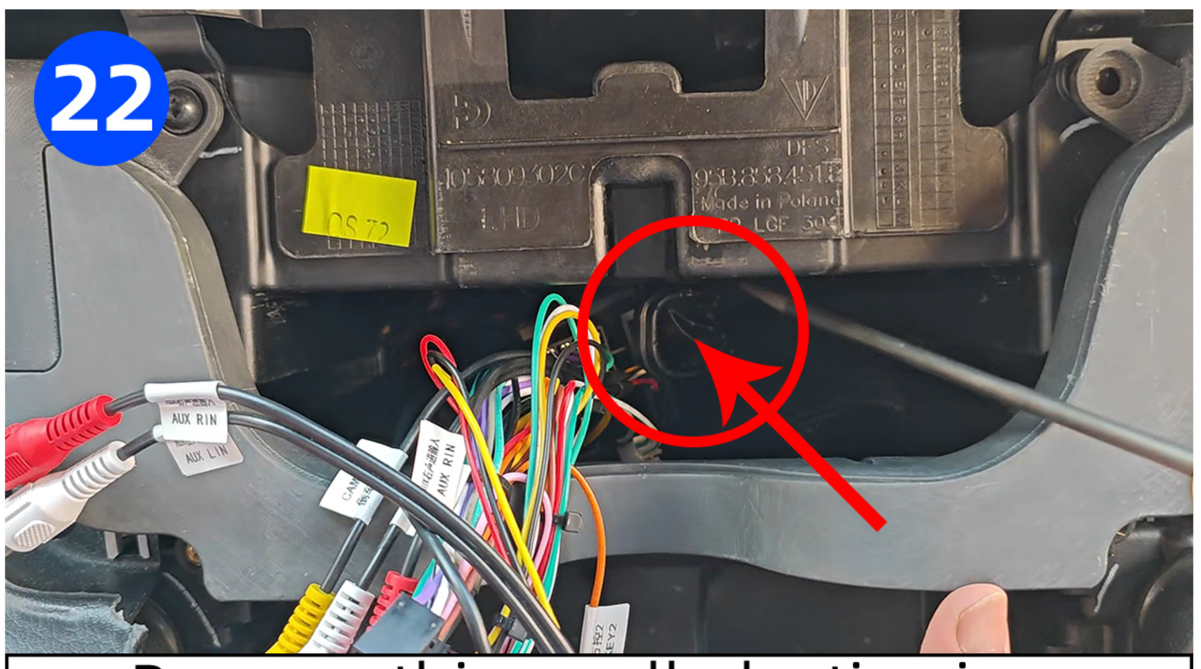


Remove this small plastic piece



GPS/4G antenna placement and wiring

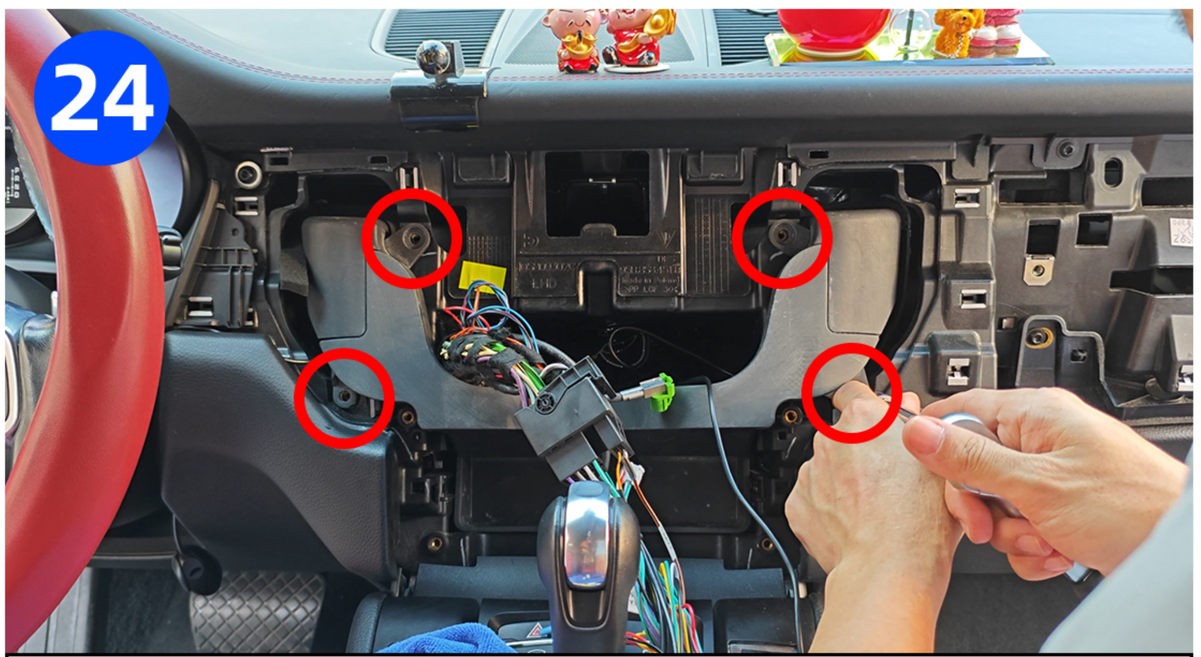


Install these 4 screws

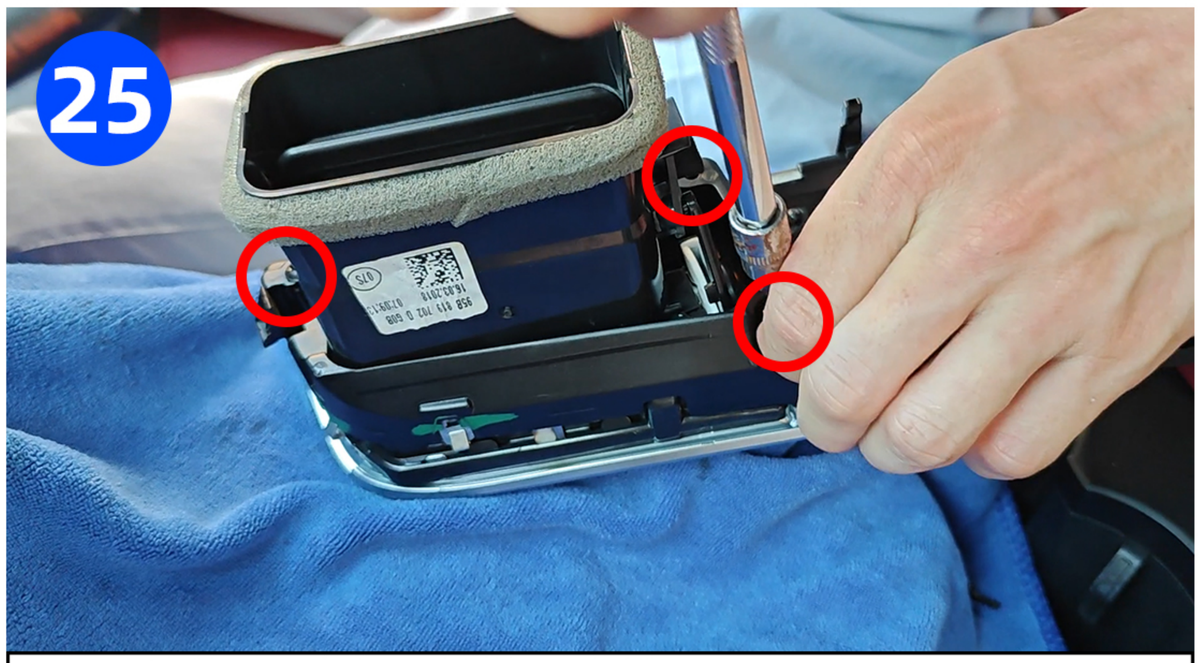


1. Twist off the 3 screws on the original car air outlet panel and remove the air outlet




2. Install the original car air outlet onto our machine

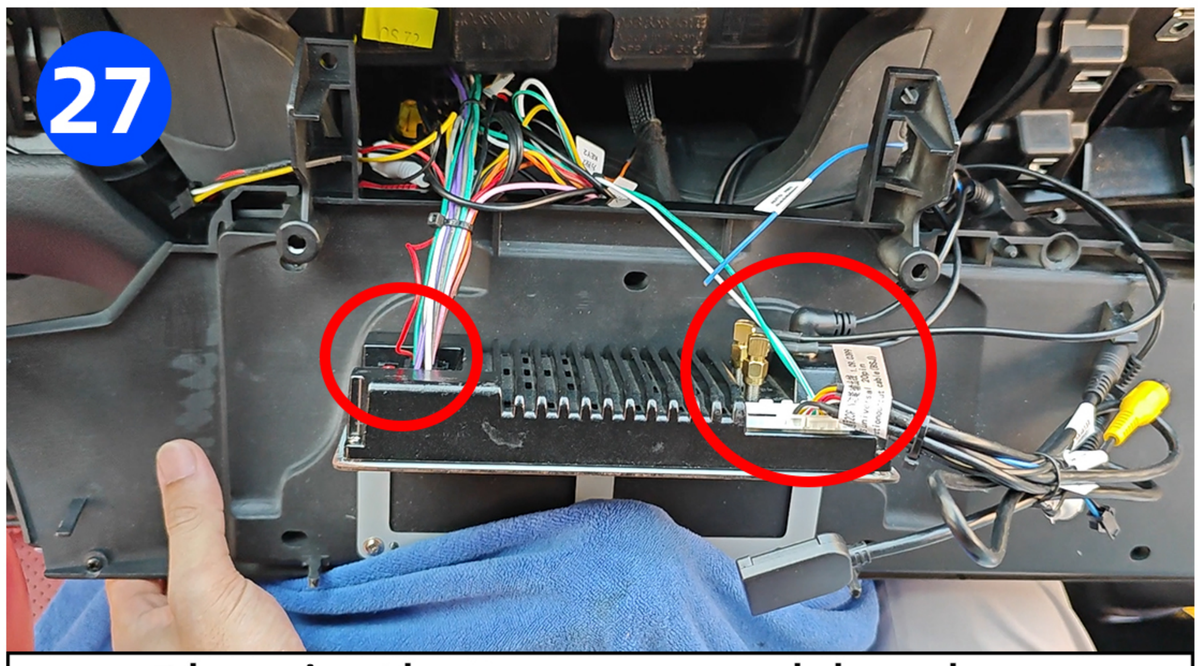

Plug in the screen cable plug

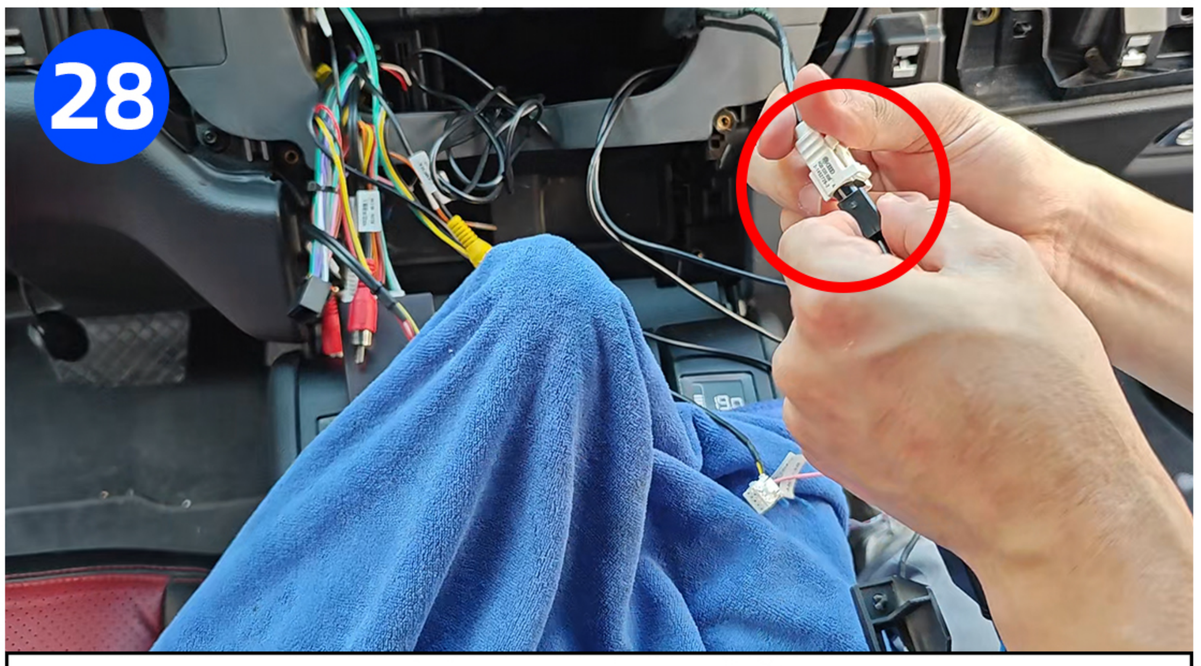

Insert this wire

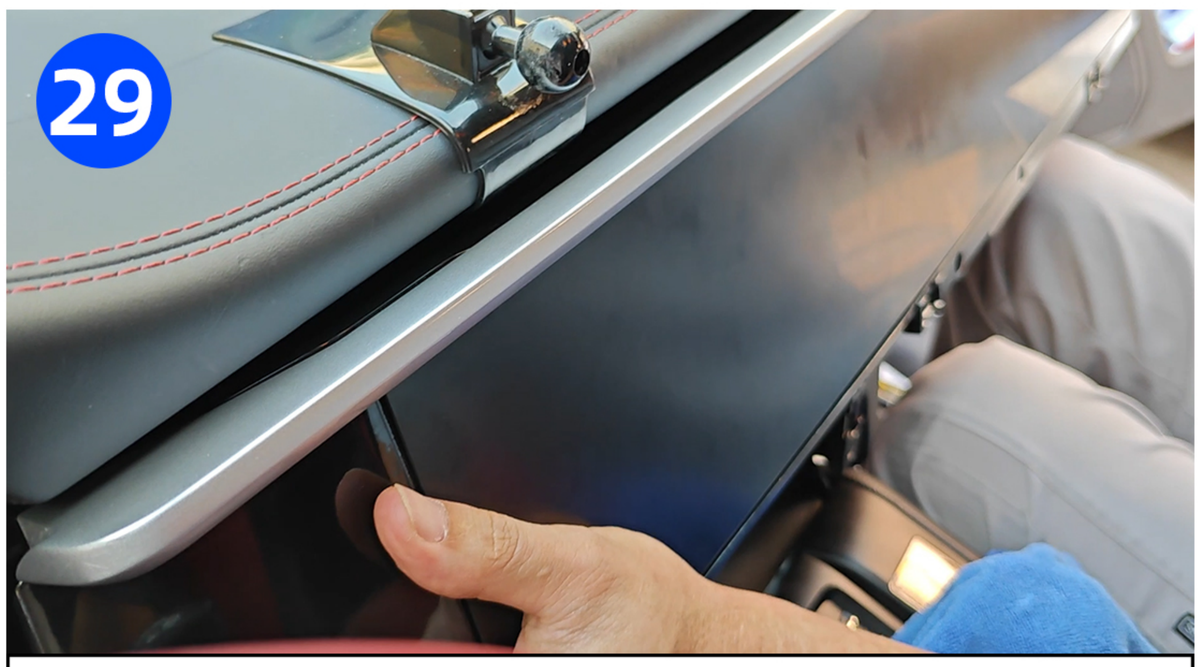

Align the screen and install it in the correct position



1. Install the screen screws



2. Install the screen screws



Install our air vents



Install the decorative panel below the screen



Fix the GPS/4G antenna securely



Cover this decorative panel



installation is complete



installation is complete